


GUARDIAN DUAL® CHECK HYDRANT PARTS LIST

- ▲ These Replacement Parts Available in HPRK-19
- ▲▲ These Replacement Parts Available in HPRK-19VB
 - * These Parts Accessible from Face of Hydrant by Removing Wall Plate Assembly.
 - ** Parts supplied as an assembly only, see part 12 or 13.

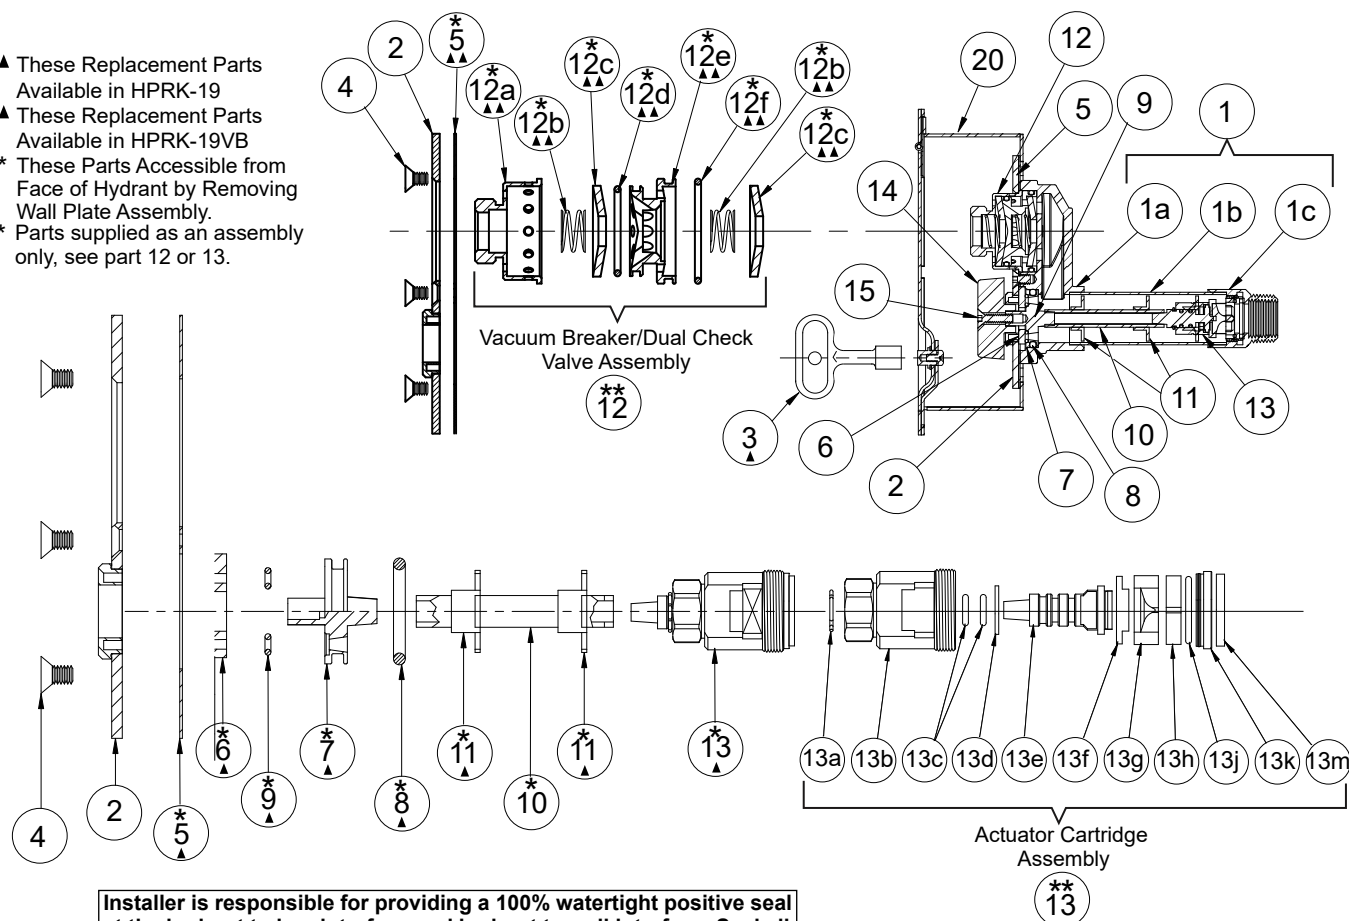

Installer is responsible for providing a 100% watertight positive seal at the hydrant to box interface and hydrant to wall interface. Seal all interior joints, seams, gasket seams/closures including around the hydrant box flange with an appropriate sealant recommended by a sealant manufacturer. NOTE: Jay R. Smith does not warrant the performance or life expectancy of the sealant material.

HYDRANT PARTS LIST							
NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
1	Casing Assembly	7	Moveable Operator Piece	12d	**Small O-Ring	13f	**Nylon Thrust Washer
1a	Head	8	Moveable Operator O-Ring	12e	**Flow Diverter	13g	**Rotating Ceramic Disc
1b	Casing	9	Drain Hole Seal (2)	12f	**Large O-Ring	13h	**Fixed Ceramic Disc
1c	Valve Housing	10	Operator Rod	13	Actuator Cartridge	13j	**O-Ring
2	Wall Plate Assembly	11	Operator Rod Guides (2)		Assembly	13k	**O-Ring Gasket Retainer
3	Key	12	Vacuum Breaker/Dual	13a	**Retaining Ring	13m	**Rubber Seal
4	Wall Plate Securing Screw (5)		Check Valve Assembly	13b	**Valve Body	14	Wheel Handle
5	Wall Plate Gasket	12a	**Vacuum Breaker Housing	13c	**Actuator O-Ring (2)	15	Wheel Handle Screw
6	Stationary Operator Piece	12b	**Spring (2)	13d	**Nylon Thrust Spacer	20	Box Assembly
		12c	**Cone Washer (2)	13e	**Valve Actuator		

B A	6-4-24 7-20-16	Added ® Added Note	HS TBW	CL BW	WEIGHT POUNDS	VOLUME CUBIC FEET	FIGURE NUMBER 5517BS
REV.	DATE	DESCRIPTION	BY	CKD. BY			