



FIGURE NUMBER 5810,5811	DRAWN BY: WAS	CHECKED BY:	APPROVED BY:	DATE: 12-8-88	SCALE: NONE	SIZE A	DRAWING NUMBER S5810	V								
	 SMITH® JAY R. SMITH MFG. CO.® MEMBER OF MORRIS GROUP INTERNATIONAL POST OFFICE BOX 3237 MONTGOMERY, ALABAMA 36109-0237 (USA) TEL: 334-277-8520 FAX: 888-377-7818 www.jrsmith.com   MEMBER OF:  LOCATION															
	NON-FREEZE GROUND HYDRANT															
	3/4" (19) OR 1" (25) CONNECTIONS															
 FRONT VIEW 																
NOTES: 1. Recommended Box-out 5 3/4 (145) x 5 3/4(145). 2. All Jay R. Smith hydrants are manufactured with "NO-LEAD" brazing rings and USDA approved lubricants. 3. The AB100, AB1953, California Lead Law, and NSF/ANSI Standard 61 - Drinking Water System Components are not applicable to Jay R. Smith hydrants as they do not convey/dispense water for human consumption through drinking or cooking. 4. Dimensions shown in parentheses are in millimeters. 5. Removal of drain hole eliminates the non-freeze feature and qualifies this hydrant as warm climate hydrant only. 6. Hose must be removed to allow proper draining of the casing. Smith is not responsible for any casings that burst or related incidents if the hose is not removed. 7. Vacuum breaker not available with 1"(25) Hose Connection Adapter -HC1. 8. FOR IRRIGATION PURPOSES ONLY. 9. Temperature Range: 33.0°F to 140.0°F (0.6°C to 60.0°C). REGULARLY FURNISHED: Bronze Non-Freeze Ground Hydrant with "T" Handle Key, and Bronze Hydrant Box. Inlet Size Furnished as Indicated by Figure Number Selected. VARIATIONS: ☐ 1"(25) Hose Connection Adaptor -HC1 ☐ Less Drain Hole -LD (Note 6) ☐ 1/8"(3) NPT Drain Hole in Box -N ☐ 1/8"(3) NPT Drain Hole in Valve Housing -NV ☐ Mild Climate -SAP ☐ "Water" Cast on Cover -W ☐ Vacuum Breaker -H (Note 6&7) OPTIONAL MATERIALS: ☐ Nickel Bronze Box -NB ☐ Polished Bronze Box -PB B(Depth of Bury) = 02(610), 03(915), 04(1220), 05(1525), 06(1830), 07(2135) or 08(2438) Feet *B = 9 1/2"(240) When Specified 5810-SAP *B = 9 1/2"(240) When Specified 5811-SAP																
TECHNICAL DATA																
Non-Freeze Ground Hydrants are supplied with a special valve housing which prevents freezing of hydrant during non-use periods. The valve housing must be installed below the frost line which prevails for the area of installation. The valve housing has a drain hole which drains the casing when the hydrant is shut off. In effect, there is no water in the casing during non-use periods. Since water from the drain hole is normally allowed to drain into the ground, the valve housing should be set in a bed of gravel. Water drained from the casing can then seep into the ground. Some locations which require Non-Freeze Ground Hydrants cannot tolerate water draining from the drain hole. Examples are parking garages, plazas and roof decks used for recreational purposes. Often in these types of applications the valve housing will protrude into a finished area which is not subject to freezing temperatures. To eliminate the problem of water drainage in this type of installation, Smith can supply a tapped drain hole in the hydrant box and a tapped drain hole in the valve housing. Through these tapped drain holes, water accumulation in the box and the water from the valve housing drain hole can be piped to a suitable drain.																
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 10%;">REV.</td> <td style="width: 10%;">DATE</td> <td style="width: 30%;">DESCRIPTION</td> <td style="width: 10%;">BY</td> <td style="width: 10%;">CKD. BY</td> <td style="width: 10%;">WEIGHT POUNDS</td> <td style="width: 10%;">VOLUME CUBIC FEET</td> <td style="width: 20%; text-align: center;"> FIGURE NUMBER 5810,5811 </td> </tr> </table>									REV.	DATE	DESCRIPTION	BY	CKD. BY	WEIGHT POUNDS	VOLUME CUBIC FEET	FIGURE NUMBER 5810,5811
REV.	DATE	DESCRIPTION	BY	CKD. BY	WEIGHT POUNDS	VOLUME CUBIC FEET	FIGURE NUMBER 5810,5811									

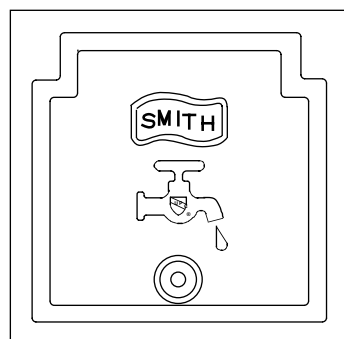

WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov

A	JAY R. SMITH MFG. CO.® MEMBER OF MORRIS GROUP INTERNATIONAL POST OFFICE BOX 3237 MONTGOMERY, ALABAMA 36109-0237 (USA) TEL: 334-277-8520 FAX: 334-272-7396 www.jrsmith.com					LOCATION																																																			
PARTS LIST WITH MAINTENANCE INSTRUCTIONS																																																									
FIGURE NUMBER	<table border="1" style="width: 100%; border-collapse: collapse; font-size: 0.8em;"> <thead> <tr> <th colspan="4" style="text-align: left; padding: 2px;">REPLACEMENT PARTS LIST - SPECIFY FIGURE NO. WHEN ORDERING</th> </tr> <tr> <th style="width: 5%;">No.</th> <th style="width: 65%;">DESCRIPTION</th> <th style="width: 5%;">No.</th> <th style="width: 20%;">DESCRIPTION</th> </tr> </thead> <tbody> <tr><td>1</td><td>Head/Casing Assembly</td><td>8</td><td>Operating Screw</td></tr> <tr><td>1a</td><td>Head</td><td>9</td><td>Operating Screw "O" Ring</td></tr> <tr><td>1b</td><td>Casing</td><td>10</td><td>Operating Rod Assembly</td></tr> <tr><td>1c</td><td>Valve Housing</td><td>10a</td><td>Coupling</td></tr> <tr><td>2</td><td>Locking Device</td><td>10b</td><td>Rod</td></tr> <tr><td>3</td><td>Key</td><td>10c</td><td>Plunger</td></tr> <tr><td>4</td><td>Cover</td><td>13</td><td>Removable Seat</td></tr> <tr><td>5</td><td>Hydrant Cover Hinge Pins (2)</td><td>17</td><td>Plunger "O" Ring</td></tr> <tr><td>6</td><td>Box</td><td>18</td><td>Plunger "O" Ring</td></tr> <tr><td>7</td><td>Face Nut</td><td></td><td></td></tr> </tbody> </table>									REPLACEMENT PARTS LIST - SPECIFY FIGURE NO. WHEN ORDERING				No.	DESCRIPTION	No.	DESCRIPTION	1	Head/Casing Assembly	8	Operating Screw	1a	Head	9	Operating Screw "O" Ring	1b	Casing	10	Operating Rod Assembly	1c	Valve Housing	10a	Coupling	2	Locking Device	10b	Rod	3	Key	10c	Plunger	4	Cover	13	Removable Seat	5	Hydrant Cover Hinge Pins (2)	17	Plunger "O" Ring	6	Box	18	Plunger "O" Ring	7	Face Nut		
	REPLACEMENT PARTS LIST - SPECIFY FIGURE NO. WHEN ORDERING																																																								
No.	DESCRIPTION	No.	DESCRIPTION																																																						
1	Head/Casing Assembly	8	Operating Screw																																																						
1a	Head	9	Operating Screw "O" Ring																																																						
1b	Casing	10	Operating Rod Assembly																																																						
1c	Valve Housing	10a	Coupling																																																						
2	Locking Device	10b	Rod																																																						
3	Key	10c	Plunger																																																						
4	Cover	13	Removable Seat																																																						
5	Hydrant Cover Hinge Pins (2)	17	Plunger "O" Ring																																																						
6	Box	18	Plunger "O" Ring																																																						
7	Face Nut																																																								
▲THESE REPLACEMENT PARTS AVAILABLE IN HPRK-41 MAINTENANCE INSTRUCTIONS 1. Shut off water supply. 2. Remove face nut. 3. Pull stem out for complete access to all working parts. 4. Check all working parts for replacement. 5. Replace complete stem assembly and face nut.																																																									
*These parts are accessible from face of hydrant by removing face nut.																																																									
A	6-28-93	Submittal Update	EMB	CL	WEIGHT POUNDS	VOLUME CUBIC FEET	FIGURE NUMBER 5810, 5811																																																		
REV.	DATE	DESCRIPTION	BY	CKD. BY																																																					

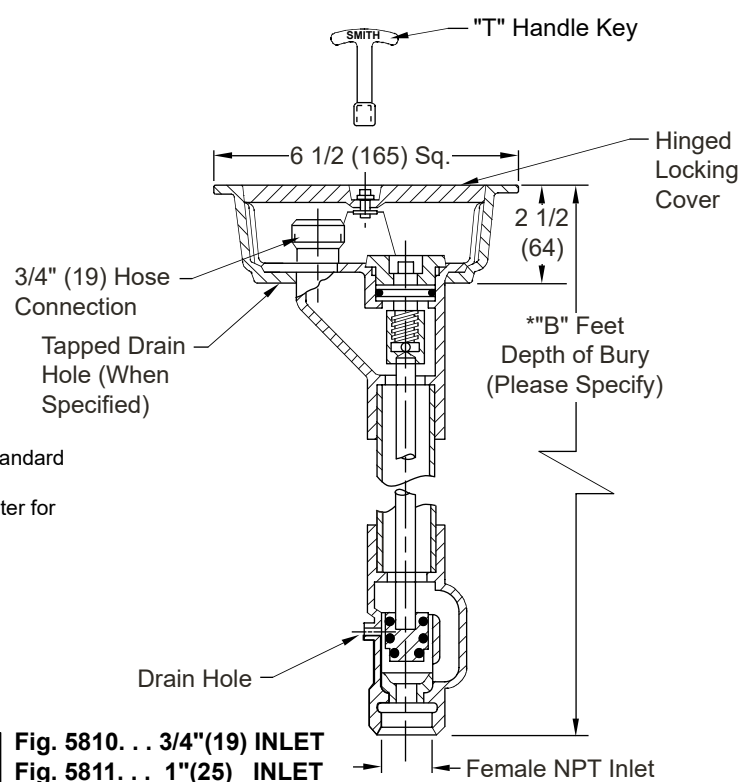

WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov