


N	SMITH® JAY R. SMITH MFG. CO.® MEMBER OF MORRIS GROUP INTERNATIONAL POST OFFICE BOX 3237 MONTGOMERY, ALABAMA 36109-0237 (USA) TEL: 334-277-8520 FAX: 888-377-7818 www.jrsmith.com MEMBER OF: MEMBER OF: MEMBER OF:				LOCATION 																							
	NON-FREEZE SANITARY POST/YARD HYDRANT																											
	REGULARLY FURNISHED: Non-Freeze Post Hydrant with Galvanized Casing Adjustable Flow Wheel Lock Handle, Stainless Steel Underground Canister and Nozzle Venturi Adapter. VARIATIONS: ☐ Vacuum Breaker -H																											
NOTES: - Hose must be removed to allow proper draining of the casing. Smith is not responsible for any casings that burst or related incidents if the hose is not removed. - The AB100, AB1953, California Lead Law, and NSF/ANSI Standard 61- Drinking Water System Components are not applicable to Jay R. Smith hydrants as they do not convey/dispense water for human consumption through drinking or cooking. - Dimensions shown in parentheses are in millimeters. FOR IRRIGATION PURPOSES ONLY. - Temperature Range: 33.0°F to 140.0°F (0.6°C to 60.0°C). (See back of sheet for parts list)																												
5904	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30px; text-align: center;">N</td> <td style="width: 30px; text-align: center;">2-4-25</td> <td rowspan="4" style="width: 30%; text-align: center; vertical-align: middle;"> Revised Notes Revised Notes Removed Function Revised Note 2 </td> <td style="width: 30px; text-align: center;">HS</td> <td style="width: 30px; text-align: center;">BW</td> <td rowspan="4" style="width: 10%; text-align: center; vertical-align: middle;"> WEIGHT POUNDS </td> <td rowspan="4" style="width: 10%; text-align: center; vertical-align: middle;"> VOLUME CUBIC FEET </td> <td rowspan="4" style="width: 20%; text-align: center; vertical-align: middle;"> FIGURE NUMBER 5904 </td> </tr> <tr> <td style="text-align: center;">M</td> <td style="text-align: center;">10-22-24</td> <td style="text-align: center;">HS</td> <td style="text-align: center;">CL</td> </tr> <tr> <td style="text-align: center;">L</td> <td style="text-align: center;">8-4-23</td> <td style="text-align: center;">HS</td> <td style="text-align: center;">CL</td> </tr> <tr> <td style="text-align: center;">K</td> <td style="text-align: center;">3-22-23</td> <td style="text-align: center;">KK</td> <td style="text-align: center;">JT</td> </tr> </table>		N	2-4-25	Revised Notes Revised Notes Removed Function Revised Note 2	HS	BW	WEIGHT POUNDS	VOLUME CUBIC FEET	FIGURE NUMBER 5904	M	10-22-24	HS	CL	L	8-4-23	HS	CL	K	3-22-23	KK	JT						
	N	2-4-25	Revised Notes Revised Notes Removed Function Revised Note 2	HS		BW	WEIGHT POUNDS				VOLUME CUBIC FEET	FIGURE NUMBER 5904																
M	10-22-24	HS		CL																								
L	8-4-23	HS		CL																								
K	3-22-23	KK		JT																								
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30px; text-align: center;">REV.</td> <td style="width: 30px; text-align: center;">DATE</td> <td style="width: 30%; text-align: center;">DESCRIPTION</td> <td style="width: 30px; text-align: center;">BY</td> <td style="width: 30px; text-align: center;">CKD. BY</td> </tr> <tr> <td> </td> <td> </td> <td> </td> <td> </td> <td> </td> </tr> </table>		REV.	DATE	DESCRIPTION	BY	CKD. BY																						
REV.	DATE	DESCRIPTION	BY	CKD. BY																								

NON-FREEZE SANITARY POST/YARD HYDRANT

OPERATION: The hydrant incorporates a nozzle-venturi adaptor (located above ground for serviceability), and a stainless steel underground canister. When the hydrant is turned off, the plunger seals against the valve seat and stops the flow. The remaining water in the casing (riser) drains back into the canister which is buried below the frost level. When the hydrant is activated, flow through the nozzle creates a vacuum which empties the canister through the venturi adapter at the nozzle. Upon activating, hydrant should be discharged fully open a minimum of 30 seconds. Since the hydrant drains into a sealed canister and not into the ground through a drainage outlet, the water never comes in contact with the soil. This avoids possible contamination of the water supply. Minimum operating line pressure should be 25 psi for proper operation.

SPECIAL INSTRUCTIONS: The brass packing nut located on the head of the sanitary post/yard hydrant has been factory adjusted. If leakage should occur upon installation or after usage, it may be necessary to slightly tighten the brass packing nut.

"CAUTION": Do not overtighten the brass packing nut. Damage will occur to the inner O-rings. Do not leave hose attached in freezing temperatures as it may prevent proper drainage of the riser pipe to the canister. To prevent unauthorized use, the handle can be locked by inserting padlock into holes provided in handle and head.

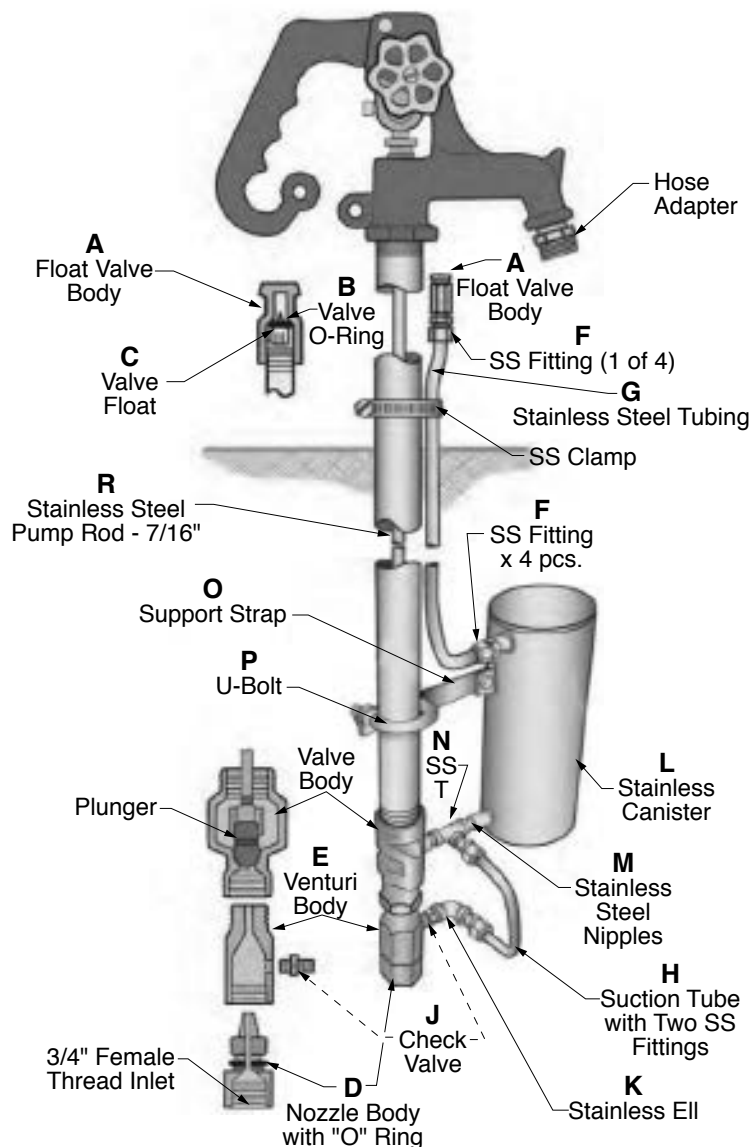

Sanitary Yard Hydrant Parts

<i>Ref.</i>	<i>Name of Part</i>
A	Valve Float Body
B	O-Ring for Valve
C	Valve Float
D	Nozzle
E	Venturi
F	3/8 x 1/8NPT x 4 Fittings 3-Pc. Compression Fitting
G	3/8" Stainless Steel Tubing
R	7/16" Stainless Steel pump Rod
H	Suction Tube
J	Check Valve
K	1/8" Stainless Steel Ell
L	Stainless Steel Canister
M	1/8" Stainless Steel Nipple
N	1/8" Stainless Steel Tee
O	Support Strap
P	U-Bolt

D	2-11-15	Revised Operation	TBW	CL	WEIGHT POUNDS	VOLUME CUBIC FEET	FIGURE NUMBER 5904BS
C	12-18-14	Revised Text	TBW	CL			
B	9-10-13	Rev. Instructions, Hydrant Parts	TBW	CL			
A	6-8-12	Rev. Drawing, Table	TBW	CL			
REV.	DATE	DESCRIPTION	BY	CKD. BY			